


Printing with Color Profiles

From Adobe Photoshop

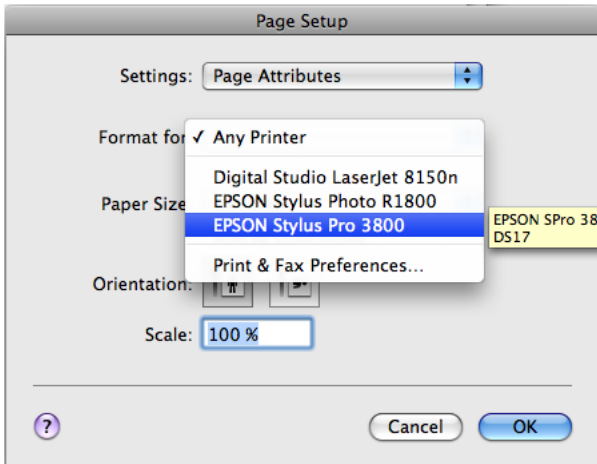


Select *File > Page Setup* and match the settings shown.


“Paper size” should match the size being used.

For borderless printing, use (Sheet Feeder - Borderless)

Auto-expand borderless scales your image up slightly to avoid leaving a white line if the paper is off by a mm or two. Retain size does not change image size, but may result in white lines if paper is not loaded perfectly.

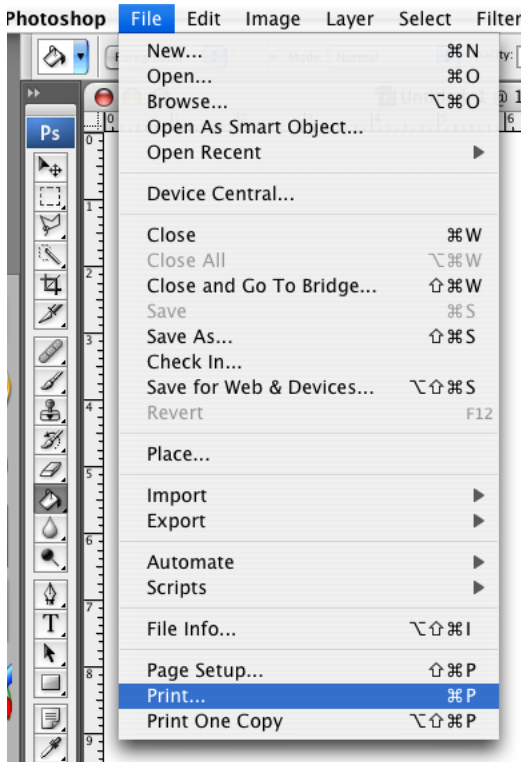

Select *File > Print*

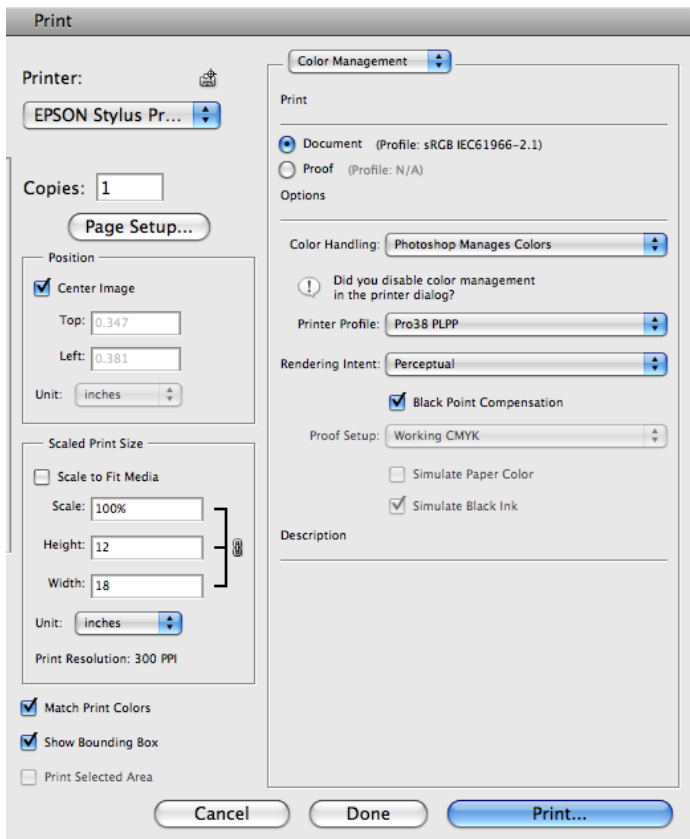

Match the settings shown under “Color Management”. For “Printer Profile”, select the appropriate profile for the paper being used.


For Enhanced Matte:
Pro38 EMP

For Luster:
Pro38 PLPP

For Glossy:
Pro38 PGPP

For user-supplied paper check with the paper manufacturer for color profiles option.

Click “Print”

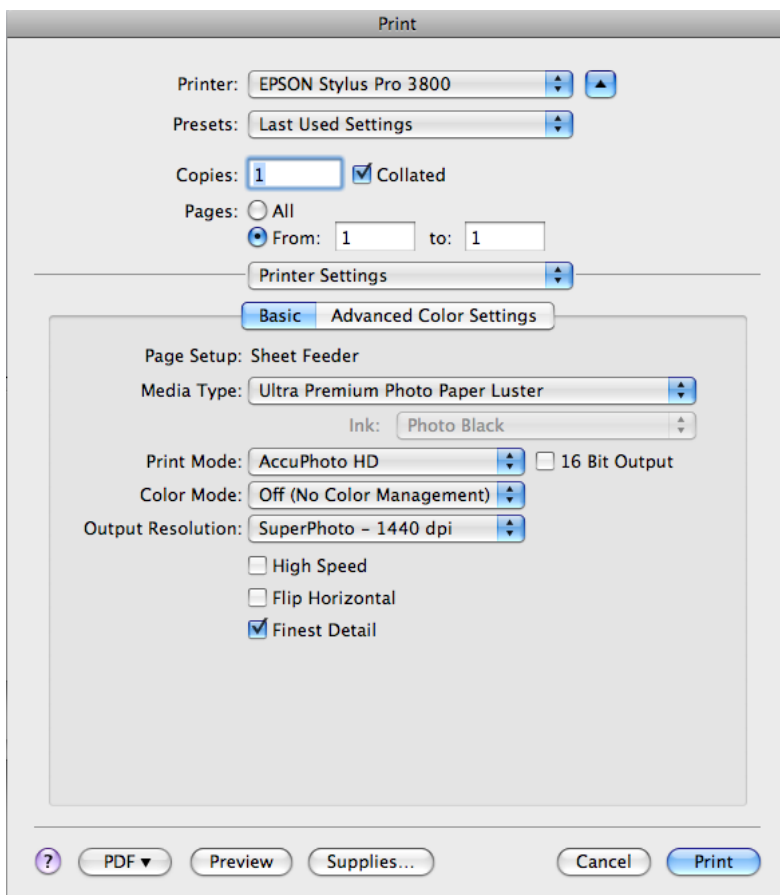

In the dialog box that comes up, select “Printer Settings” from the third dropdown, and match the settings shown to the left for Print Mode, Color Mode, and Output Resolution.

Select the appropriate Media Type to match the paper you’re using. Luster and Glossy are under Photo Paper, Enhanced Matte is under Matte Paper.

Be sure High Speed is unchecked and that Finest Detail is checked.

If you set “Presets” at the top of the window to “Last Used Settings”, you can use the settings you specified for the previous print to make printing multiple images on the same paper type easier.

Click “Print” and wait while the document prints.